

**Motor Battery -**

**Motor Battery +**

**Power LED :** Indicate the RC Switch10 is powered up.

**Switch LED :** Indicate the switch is ON.

**Futaba R2006GS 6 CHANNEL RECEIVER**

**4V-6V GND**

**Switch is OFF (RC Signal > 1.8ms):**

**Switch is ON (RC Signal < 1.2ms):**

**COM NC NO**

**COM NC NO**

**\*Switch is OFF when no RC signal is received.**

**Switch LED :** Indicate the switch is ON.



This is for reference only. Please connect to the preferred channel accordingly.

**4V-6V GND**

**Switch is OFF (RC Signal > 1.8ms):**



**Switch is ON (RC Signal < 1.2ms):**



\*Switch is OFF when no RC signal is received.